

Swipe ID Verification	Manual ID Verification	Age Setup
<ul style="list-style-type: none"> › Press EasyID › Swipe ID OR Driver's License › Press key next to Product Purchased + OK Display will show if Product(s) are Allowed. › Press to return to EasyID › Press to return to Main Menu of Applications 	<ul style="list-style-type: none"> › Press EasyID Enter Date of Birth MMDDYY › Press › Press key next to Product Purchased + Display will show if Product(s) are Allowed. › Press to return to EasyID › Press to return to Main Menu of Applications <p>This function should be used whenever a magnetic stripe is not present or is not readable on the driver's license or state issued ID.</p>	<ul style="list-style-type: none"> › Press EasyID › Press Setup › Enter Password + › Press Age Setup › Press to Edit Age on 1ST Product › Press Two Times › Key in Age + Press OK › Press Three Times to Edit Age on 2ND Product › Press Two Times › Key in Age + Press OK › Press OK
Print Journal	Clear Journal	Set Auto Print
<ul style="list-style-type: none"> › Press EasyID › Press Setup › Press Journal › Press Print › Edit Date Range if Necessary › Press OK › Press Cncl To Return to Setup Menu › Press X To Return to ID Verification 	<ul style="list-style-type: none"> › Press EasyID › Press Setup › Press Journal › Press Clear › Press OK To Clear Journal › Press Cncl To Return to Setup Menu › Press X To Return to ID Verification 	<ul style="list-style-type: none"> › Press EasyID › Press Setup › Press › Press Set Auto Print › Press Enable to Auto Print + Press Done OR › Press Disable to Turn Off Auto Print+ Press Done › Press X To Return to ID Verification

NOTE:

Pressing the 3 key from the main menu on the Omni 3750 will advance the paper.

Enter **Password** When Prompted

Setup Demographics	Print Demographics	Clear Demographics
<ul style="list-style-type: none"> › Press EasyID › Press Setup › Enter Password +  › Press Demo-graphics › Press Setup › Press ← to change Demographics Description › Press  To Change the Min Age OR › Press  Again To Change the Max Age › Press ↓ to go to the next Demographics range and follow the above steps to change description, minimum or maximum age › Press OK to save the change and return to the Demographics Menu › Press X to return to ID Verification 	<ul style="list-style-type: none"> › Press EasyID › Press Setup › Enter Password +  › Press Demo-graphics › Press Print 	<ul style="list-style-type: none"> › Press EasyID › Press Setup › Enter Password +  › Press Demo-graphics › Press Clear
Set Password		Diagnostics
<ul style="list-style-type: none"> › Press EasyID › Press Setup › Enter Password +  › Press ↓ Until you see Password, Then Press Password › Type New Password +  › Re-enter New Password to verify +  › Press OK to save the change and return to the Setup Menu 		<ul style="list-style-type: none"> › Press EasyID › Press Setup › Enter Password +  › Press ↓ Until you see Diagnostic, Then Press Diagnostic › Swipe ID
Set Time/Date	Disclaimer	
<ul style="list-style-type: none"> › Press EasyID › Press Setup › Enter Password +  › Press ↓ Until you see Date/Time, Then Press Set Date/Time › Press ← to Change the Date › Press  and then  to Change the Time › Press OK to save the change and return to the Setup Menu 	<p>EasyID is effective as part of a comprehensive program to determine the legal sale of age-restricted products. Do not rely on EasyID as the only source of information. It does not take the place of a trained, aware, and conscientious retailer/cashier. EasyID is not a replacement for visually checking the identification. You must be sure that the identification is legal and valid.</p> <p>Helpful Hints on the proper use of EasyID:</p> <ol style="list-style-type: none"> 1) Make sure that the date and time are correctly set on the terminal 2) Make sure that the photo and/or description on the ID card match the customer 3) Make sure that all words printed on the ID card are legible and clear 4) Make sure that any holograms or watermarks on the ID card are visible 5) Make sure that the picture is visible and has not been tampered with 	

NOTE:

Pressing the 3 key from the main menu on the Omni 3750 will advance the paper.

Enter **Password** When Prompted